

Bogaard Distributors Pty Ltd

ACN 008 121 448 ABN 35 088 121 448
IMPORTERS MANUFACTURERS DISTRIBUTORS
Email: lynne@bogaard.com.au

Bogaard Turbo Timer Installation Information

The timer will not operate until the engine has been running for at least 30 seconds. This prevents unwanted timer operation if the engine is started accidentally.

VEHICLE REMOTE CENTRAL LOCKING

With most modern vehicles, the remote central locking is disabled whenever the engine is running. This only applies to the remote itself (on the ignition key or key ring). This is to prevent unwanted flashing of indicators or sounding of the horn while driving.

When a turbo timer is installed to provide an engine idle period, the remote central locking may be disabled until the end of the idle period. The vehicle may still be locked using the ignition key at the driver's door, accessing the central locking.

However, where the law requires, the vehicle driver must remain with the vehicle until completion of the idle period.